






## **PLAKA – SLIDING BEARING**

Elastomeric sliding bearings REF 07.04.01 - Version V01 - 26/03/2021



## **General information**

Please follow the installation instructions to get the designed values of the carrying capacities of the bearings.

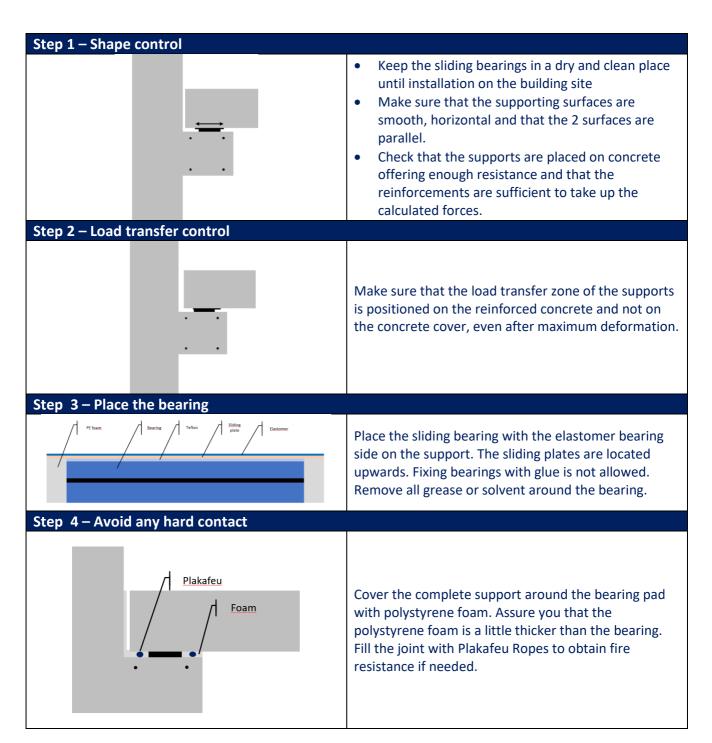

## ©Copyright protected

This sheet, written with great care, supersedes all previous versions. The technical information on the design, models, illustrations, design values and specifications are believed to be accurate. We make no warranties (expressed or implied) as to its accuracy and assumes no liability in connection with non suitable use of this product. We reserve the right to modify the contents of this form without prior notice.



## **Installation instructions**



**PLAKA – SLIDING BEARING** 

Elastomeric sliding bearings REF 07.04.01 - Version V01 - 26/03/2021



Step 5 – Tape the joints

Tape all joints to avoid infiltration of concrete laitance

Polystyrene foam 2-3 mm thicker as sliding bearing

Step 6 – Pour the contrete

Pour the concrete carefully in the area of the bearings and avoid contact with the vibrator while compacting the concrete.

This sheet, written with great care, supersedes all previous versions. The technical information on the design, models, illustrations, design values and specifications are believed to be accurate. We make no warranties (expressed or implied) as to its accuracy and assumes no liability in connection with non suitable use of this product. We reserve the right to modify the contents of this form without prior notice.